

AP-GIC-011A-060/095 PoE Injector

Quick Installation Guide

INTRODUCTION


Model	Description
AP-GIC-011A-060	60W high power PoE output
	95W high power PoE output (The PoE output should only be connected to an IP camera. It should not be connected to non-PoE devices, such as a PC's LAN port)

PACKAGE CONTENTS

* 1x PoE injector	* 1x AC power cord
* 1x Quick Installation Guide	

⚠ IMPORTANT:

- 1. Use CAT5 or 5e UTP/STP cables.
- 2. AC input ($100\sim240\text{V/AC}$, $50\sim60\text{Hz}$), for a max. consumption of 65/100W.

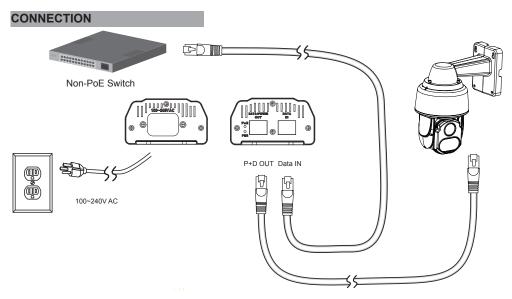

Installation Steps:

- 1. Connect the included AC power cord to the injector. The Power LED (Green) should be lit.
- 2. Connect the Data IN port to a LAN switch using an Ethernet cable.
- 3. Connect the Power+Data OUT port to a powered device, i.e., IP camera, using another Ethernet cable. Make sure the PoE LED (Yellow) is lit.
- 4. Check if the powered device (IP camera) is working properly. An IP camera may take up to 1 or 2 minutes to power up.

All specifications are subject to change without noice. Copyright @ 2017 VIVOTEK INC. All rights reserved.