

## AU-004 Network Ceiling Speaker

### Quick Installation Guide

#### INTRODUCTION

AU-004 IP Network Ceiling Speaker is an indoor speaker with built-in microphone. It uses one cable for both power and connectivity (Power over Ethernet) so it is easy to install, perfect for building, school, offices and hospitals.

The loudspeaker has a high sound with a sensitivity of 96 dB. With SIP support, meaning it can be integrated to the existing IP telephone systems, the user can make a voice call using telephone system. Use speaker to warn off intruders and thieves, make announcements, and even play music.

#### PACKAGE CONTENTS

* 1x Network Ceiling Speaker	* 1x Quick Installation Guide
------------------------------	-------------------------------

#### ⚠ IMPORTANT:


Use CAT5/5e/6/6e UTP/STP cables.

Default User name: admin



Default Password: 1234

#### CONNECTION

Drill a 175mm diameter hole in the ceiling.

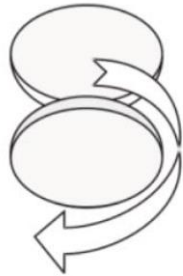

Lift the clips of the speaker and push it in.

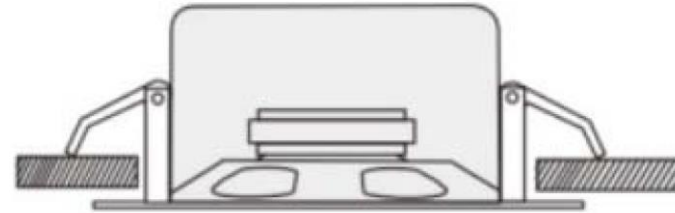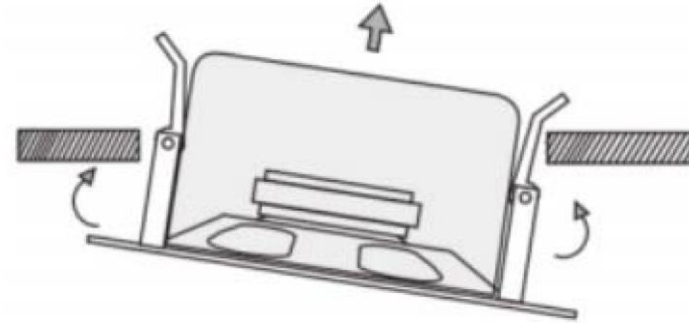


## CONFIGURATION

(1) Download Shepherd from VIVOTEK official website:

<https://www.vivotek.com/Shepherd>.

(2) Run the Shepherd and scan.

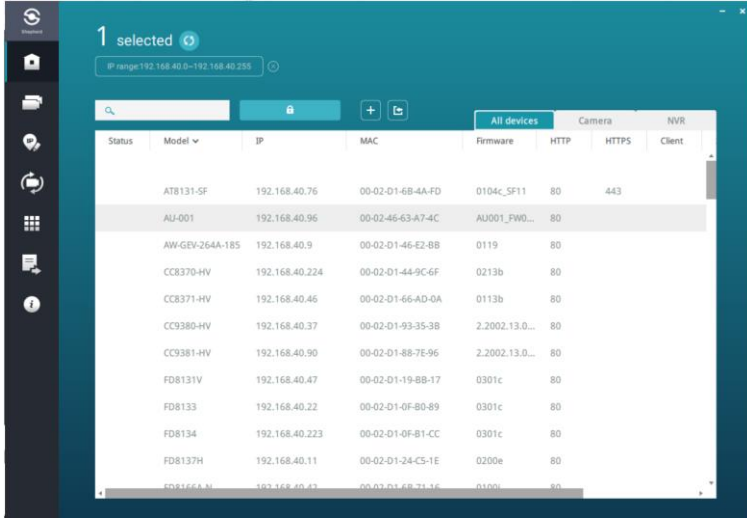

The screenshot shows the VIVOTEK Shepherd software interface. At the top, it indicates '1 selected' and shows the IP range '192.168.40.0-192.168.40.255'. Below this is a search bar and a table of discovered devices. The table has columns for Status, Model, IP, MAC, Firmware, HTTP, HTTPS, and Client. The device 'AU-001' is highlighted in grey.

Status	Model	IP	MAC	Firmware	HTTP	HTTPS	Client
	AT8131-SF	192.168.40.76	00-02-01-68-4A-FD	0104c_SF11	80	443	
	AU-001	192.168.40.96	00-02-46-63-A7-4C	AU001_FWO...	80		
	AW-GEV-264A-185	192.168.40.9	00-02-01-46-E2-8B	0119	80		
	CCR370-HV	192.168.40.224	00-02-01-44-9C-6F	0213b	80		
	CCR371-HV	192.168.40.46	00-02-01-66-AD-0A	0113b	80		
	CC9380-HV	192.168.40.37	00-02-01-93-35-3B	2.2002.13.0...	80		
	CC9381-HV	192.168.40.90	00-02-01-88-7E-96	2.2002.13.0...	80		
	FD8131V	192.168.40.47	00-02-01-19-8B-17	0301c	80		
	FD8133	192.168.40.22	00-02-01-0F-80-89	0301c	80		
	FD8134	192.168.40.223	00-02-01-0F-81-CC	0301c	80		
	FD8137H	192.168.40.11	00-02-01-24-C5-1E	0200e	80		
	FD8166A-N	192.168.40.43	00-03-01-68-71-1E	0100f	80		

(3) Double click on AU-004 to open the web UI.

Username: admin

Default Password: 1234

(Password can be changed in System ->Security)

(4) Start your setting.

All specifications are subject to change without notice.

Copyright © 2021 VIVOTEK INC. All rights reserved.

### VIVOTEK INC.

6F, No.192, Lien-Cheng Rd., Chung-Ho, New Taipei City, 235, Taiwan, R.O.C.  
|T: +886-2-82455282| F: +886-2-82455532| E: sales@vivotek.com

### VIVOTEK USA, INC.

2050 Ringwood Avenue, San Jose, CA 95131  
|T: 408-773-8686| F: 408-773-8298| E: salesusa@vivotek.com

### VIVOTEK Europe

Zandsteen 15, 2132 MZ Hoofddorp Delta Electronics  
T: +31 (0)20 800 3817 | E: saleseurope@vivotek.com